




# PARTS LIST of MANUAL BALL VALVE

## 手動球閥 零件組合圖

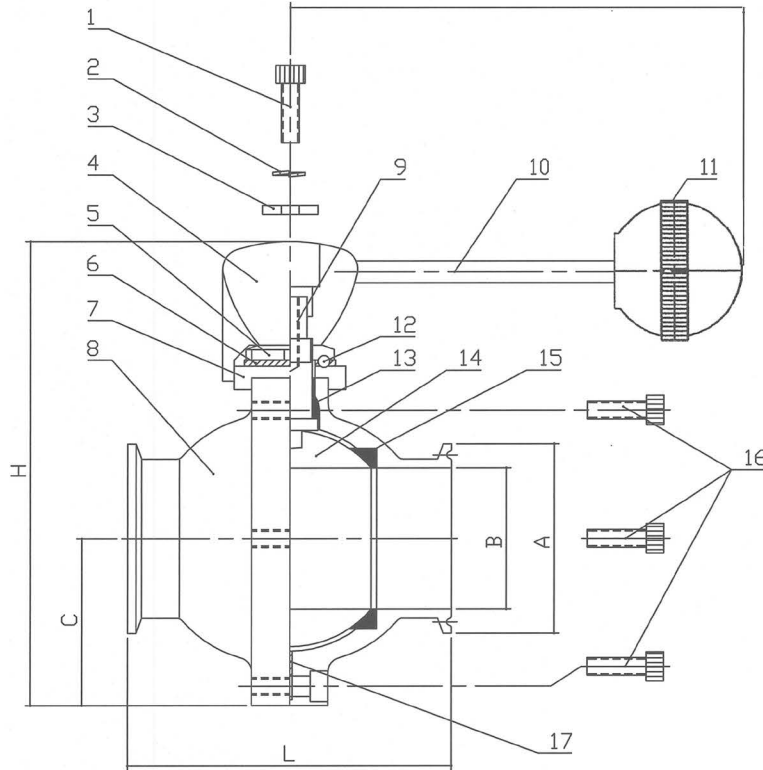

1. 內六角螺絲 1 / Hexagon Socket Screw 1 \* SS304
2. 彈簧華司 / Spring Washer \* SUS
3. 平面華司 / Flat Washer \* SS304
4. 手把頭 (1" - 3" 共用, 4" ) / Handle Top \* SS304
5. 軸承螺帽 (1" - 4" 共用) / Lock Nut \* SS304
6. 鋼珠墊 (1" - 4" 共用) / Seat of Stainless Ball Bearing \* SS304
7. 定位片 (1" - 4" 共用) / Position Plate \* SS304
8. 閥體 / Valve Body \* SS316
9. 軸心 / Stem \* SS316
10. 手把柄 / Handle Lever \* SS304
11. 塑膠圓珠 / Ball Knob \* Plastic
12. 鋼珠 (1" - 4" 共用) / Stainless Steel Balls for Ball Bearing \* SS304  
- total 12pcs
13. 軸墊 (1" - 4" 共用) / STEM SEAT \* Teflon  
- total 1 pc
14. 球體 / Ball \* SS316
15. 球墊 (1" - 4" 各不同) / BALL SEAT \* Teflon  
- total 2 pc
16. 內六角螺絲 2 / Hexagon Socket Screw 2 \* SS304
17. 體墊 (1" - 4" 各不同) / BODY SEAT \* Silicone  
- total 1 pc